

Instructions for Aerosol Can Tapping Valve:

Make sure the self-tapping valve is open all the way so the selfpiercing needle is not sticking out. Place the gasket on the valve.

Now attach the valve to the can with the hose clamps. Screw the valve all the way closed, this will pierce and seal the can to the valve.

Open and close when desired. **Caution: Make sure can is not under pressure when removing clamps!**

For Parts or Service Please Call (607) 397-9269

Or E-mail us at: info@aerotechlab.com

Aero-Tech Laboratory Equipment Company, LLC

DISCLAIMER: Aero-Tech Laboratory Equipment Company shall not be liable for any injury, loss or damage, direct or consequential, arising out of the use of this product. Do to the nature of research and development the user is responsible for determining the suitability of this product for it's intended use.