

For shipping purposes the needle on your gauge has been secured to the face. Please carefully unscrew the protective cover and carefully remove the tape. Then re-screw the cover back on.

Please read before operating gauge

**THIS EQUIPMENT IS ONLY TO BE USED BY FULLY CERTIFIED
AND TRAINED PERSONAL. THE USER IS FULLY RESPONSIBLE
FOR ANY INJURY OR DAMAGE RESULTING
FROM THE USE OF THIS EQUIPMENT**

Operation instructions:

1. With the HPT-100 in your hand, keep your thumb on the toggle valve.
2. With the correct filling adapter attached to the gauge, put the adapter on the aerosol can valve and depress it with the gauge.
3. Now press the toggle valve with you thumb. You will see the gauge register pressure. Now release the toggle valve. At this point the gauge is pre-pressurized.
4. Remove it from the can valve. The next reading you take will be very accurate because your gauge is pre- pressurized.

You can also pre-pressurize it with an alternate air supply.

Caution: Do not over pressurize the gauge past its intended reading. It could cause damage. Do not remove it from the diaphragm or remove the setscrew in the diaphragm. It will void the calibration.

For parts, service or recalibration, please call (870) 420.3613
or email us at: info@aerotechlab.com

**Aero-Tech Laboratory Equipment Company, LLC
6516A Terrapin Rd. Harrison, Arkansas 72601
U.S.A.**