

For shipping purposes the needle on your gauge has been secured to the face. Please carefully unscrew the protective cover and carefully remove the tape. Then re-screw the cover back on.

### Operation instructions:

1. With the HPT-100 in your hand, keep your thumb on the toggle valve.
2. With the correct filling adapter attached to the gauge, put the adapter on the aerosol can valve and depress it with the gauge.
3. Now depress the toggle valve with you thumb. You will see the gauge register pressure. Now release the toggle valve. At this point the gauge is pre-pressurized.
4. Remove it from the can valve. Very slowly & gently depress the toggle valve again. Just relieve about 5 to 10 psi. The next reading you take will be very accurate because your gauge is pre-pressurized.

You can also pre-pressurize it with an alternate air supply.

**Caution:** Do not over pressurize the gauge past it's intended reading. It could cause damage. Do not remove it from the diaphragm or remove the set screw in the diaphragm. It will void the calibration.

For parts, service or recalibration, please call (417) 533-5552 or email us at: [info@aerotechlab.com](mailto:info@aerotechlab.com)

Aero-Tech Laboratory Equipment Company, LLC  
21397 Tampa Drive  
Lebanon, MO 65536  
U.S.A.