


Hydrostatic Burst Tester

The Model HBT-1000

Is manually operated. It attaches to any standard 1 inch male can valve. It does require a water source (bucket or tap). It can produce up to 1000 psi. It can also be used with a gas or air supply. Shielding the test container in a plastic pail is recommended. The gauge is equipped with a maximum indicating 2nd hand. Which allows you to see the exact burst pressure of the test container. It also comes with a heavy duty carrying case.



Price: \$1,875.00

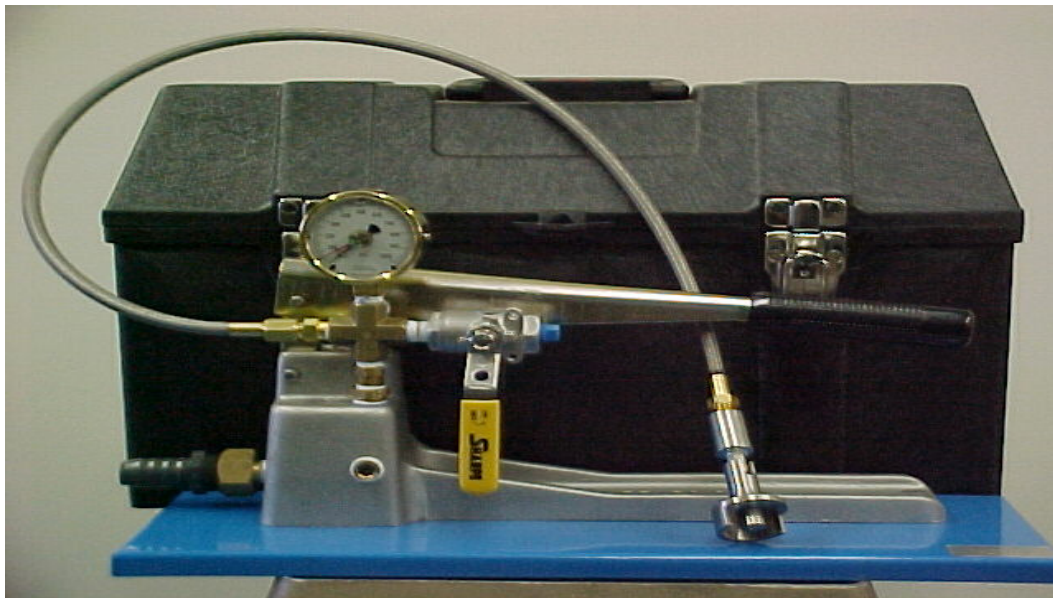

\$ 50.00 Crating charge for Burst Tester

***PRICES ARE SUBJECT TO CHANGE**